

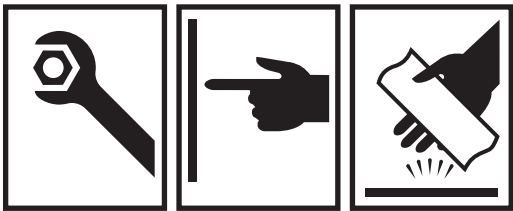


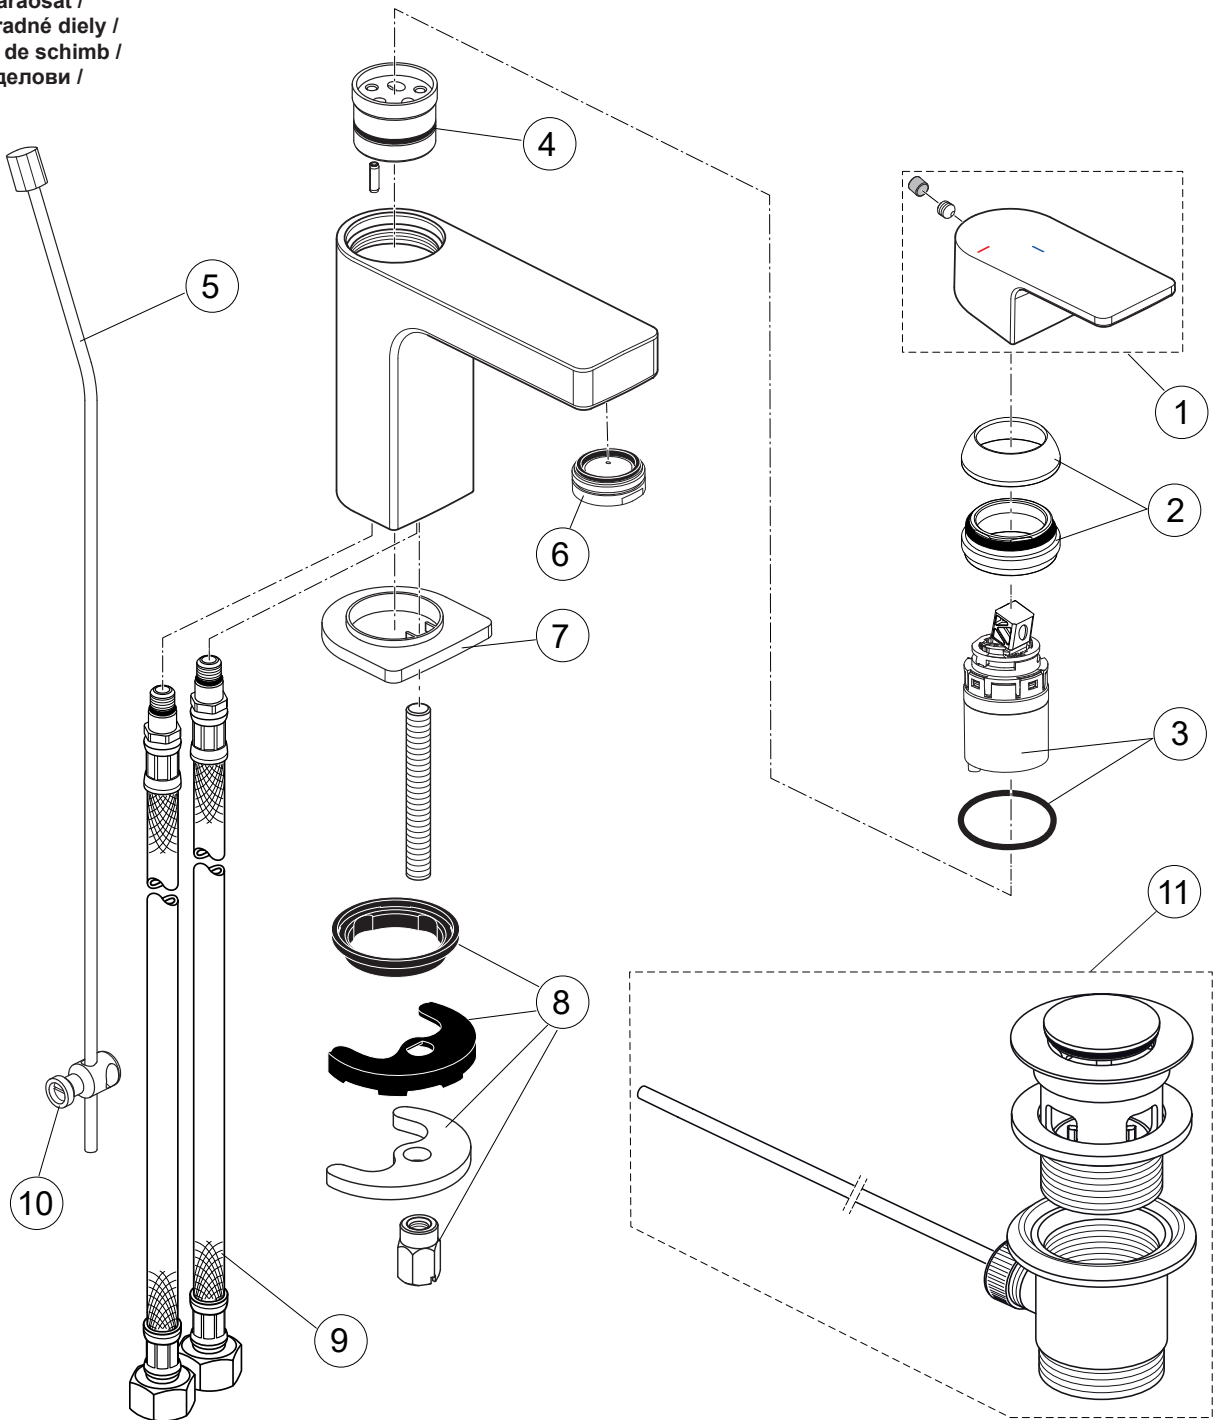

Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto /
Parte de reposição / Reserveonderdelen / Reservdelar / Reservedeler / Varaosat /
Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely /
Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Piese de schimb /
Rendelhető alkatrészek / Запасні частини / Reservni delovi / Резервни делови /
Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezerwju dajų

Pos.	Part No.
1	A 861 529 AA
2	A 861 417 AA
3	A 861 399 NU
4	A 961 855 NU
5	B 961 119 AA
6	B 961 383 AA
7	A 861 295 AA
8	A 964 520 NU
9	A 962 370 NU
10	A 961 172 NU
11	B 960 853 AA



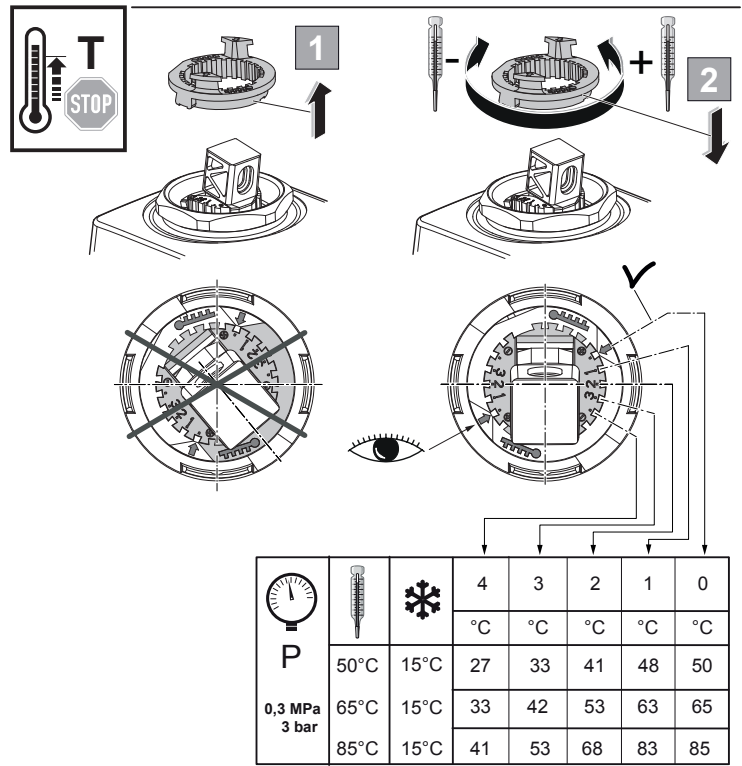


Ideal Standard

EDGE








A 7267 .. A 7268 ..

1021 / A 868 515

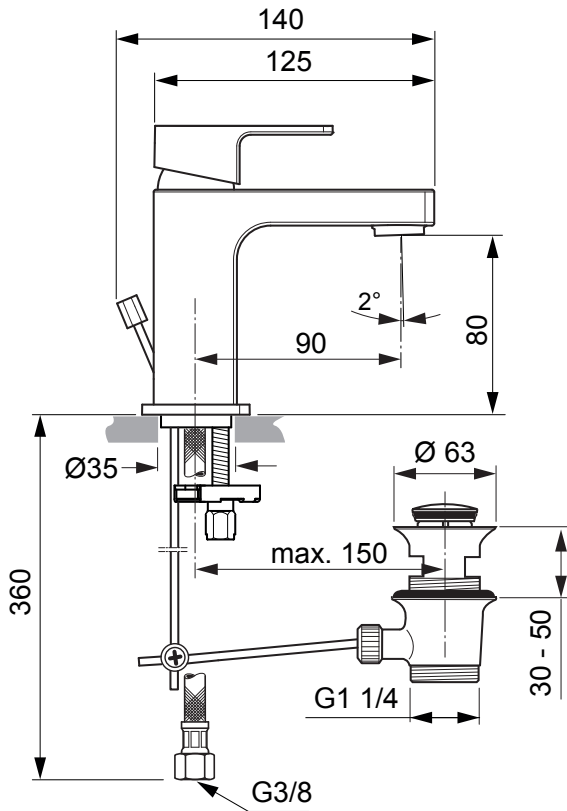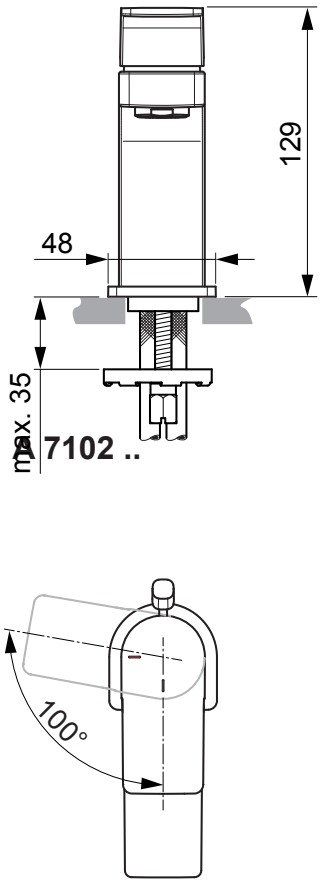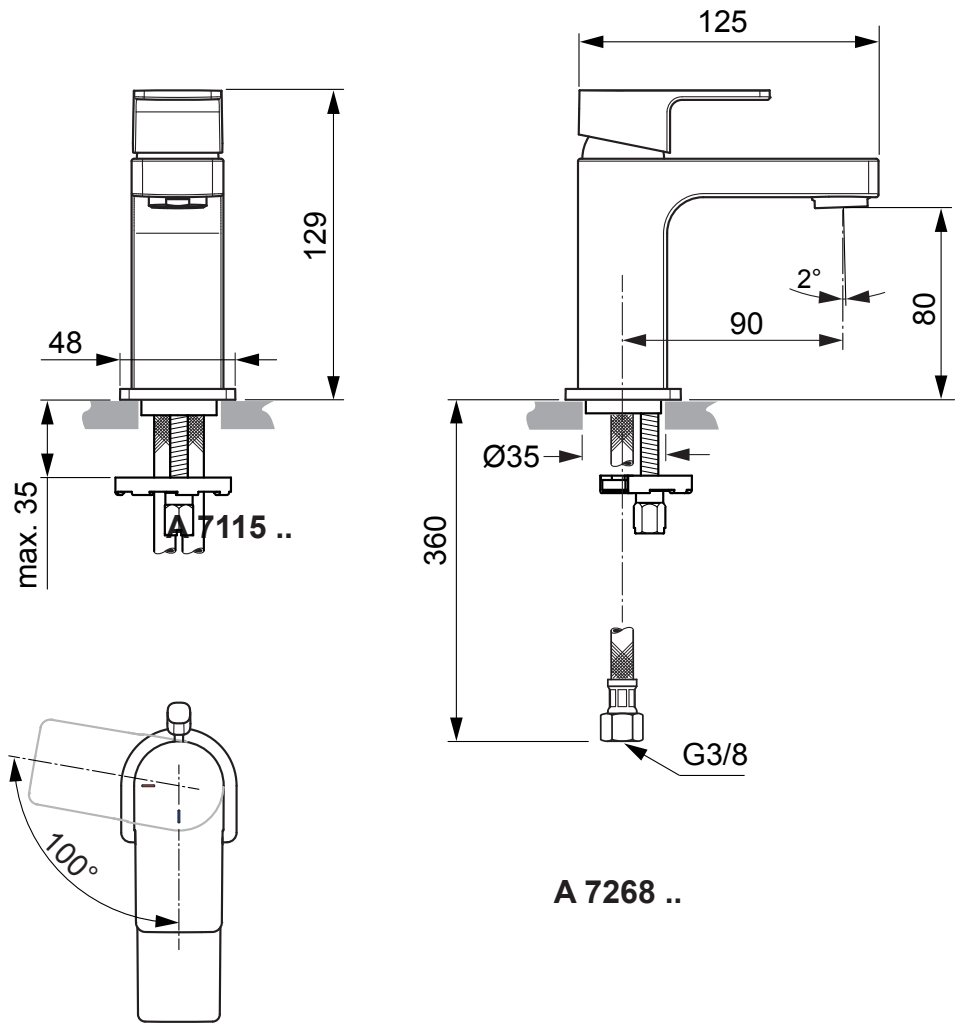

Ideal Standard International NV
Corporate Village - Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium

www.idealstandardinternational.com

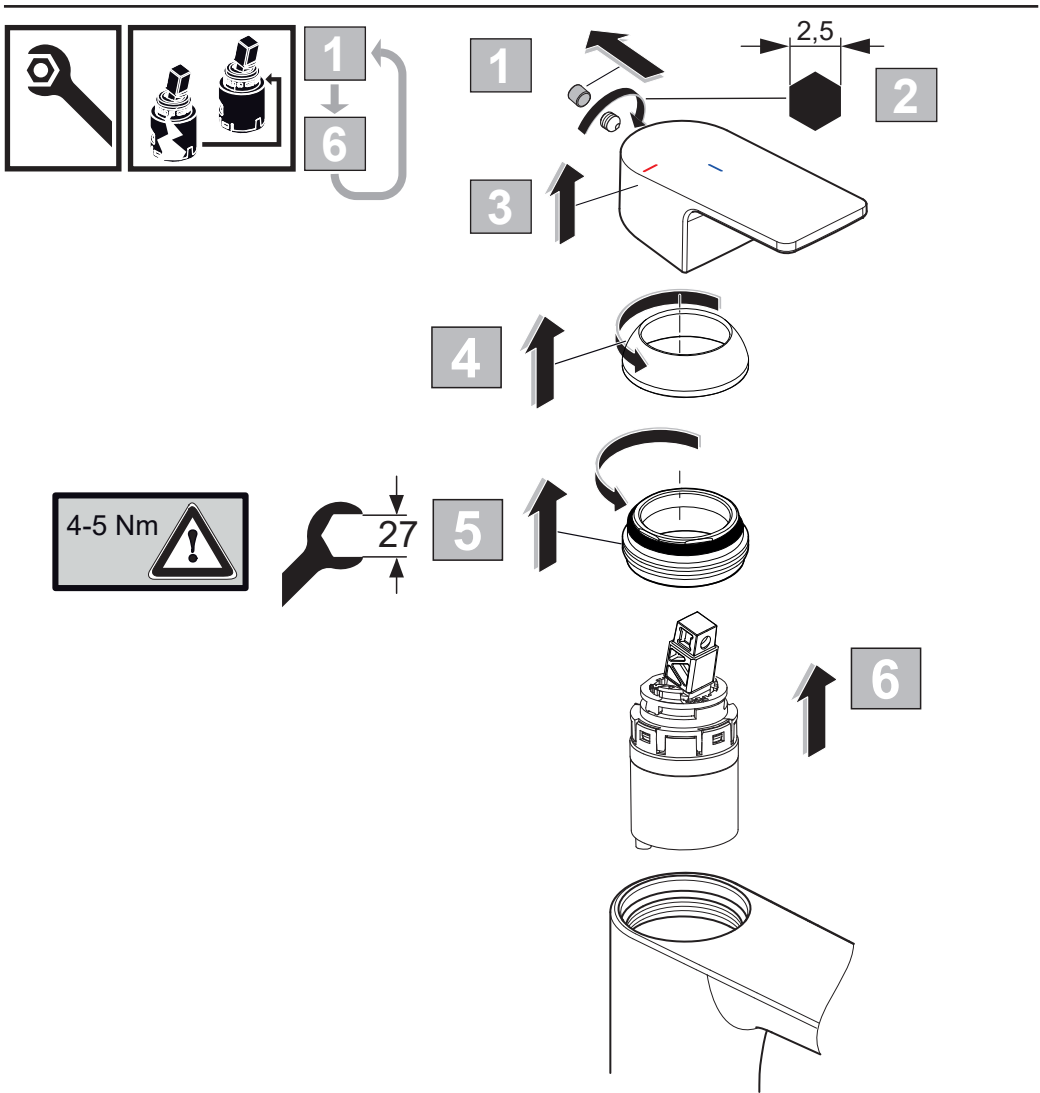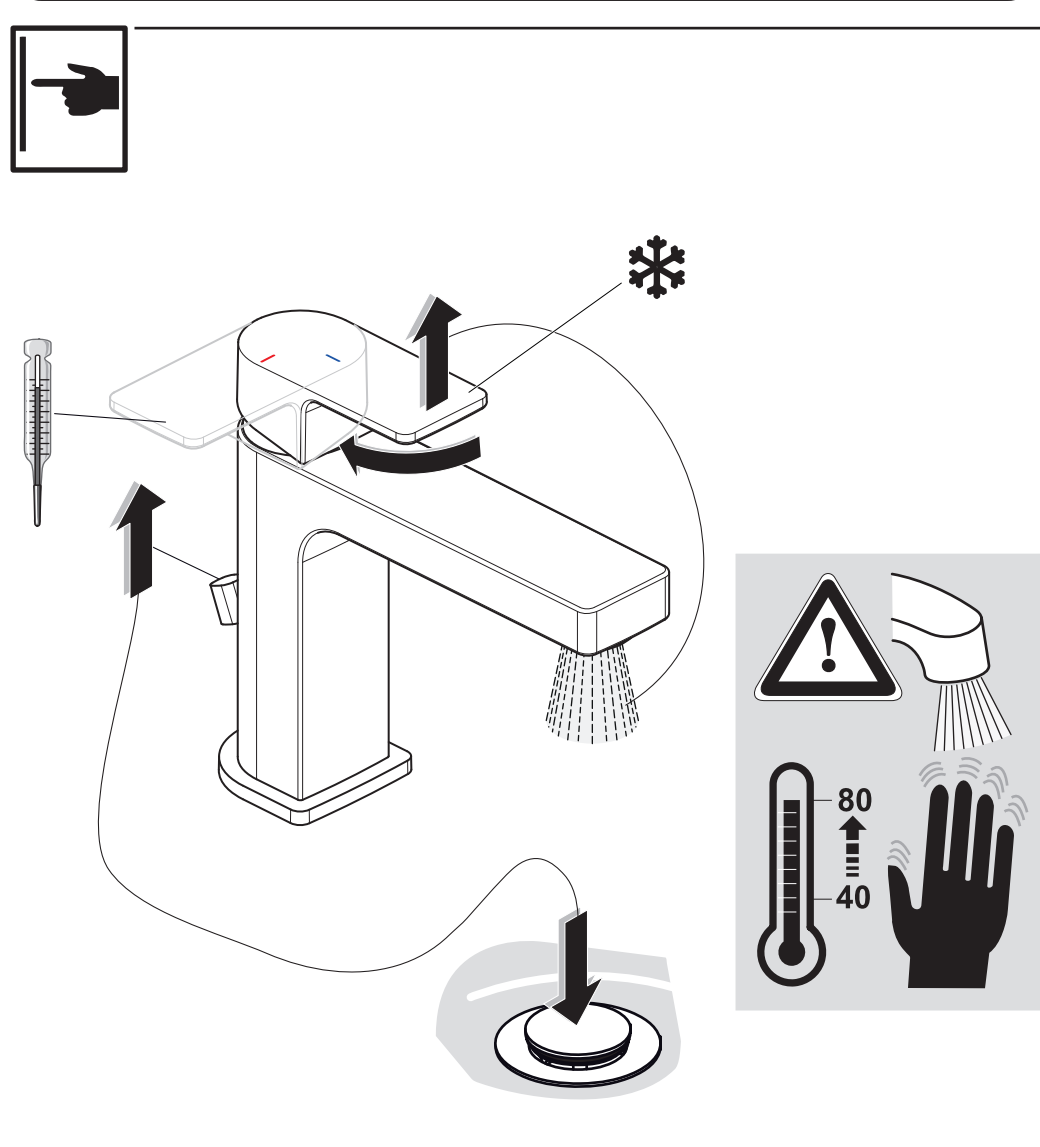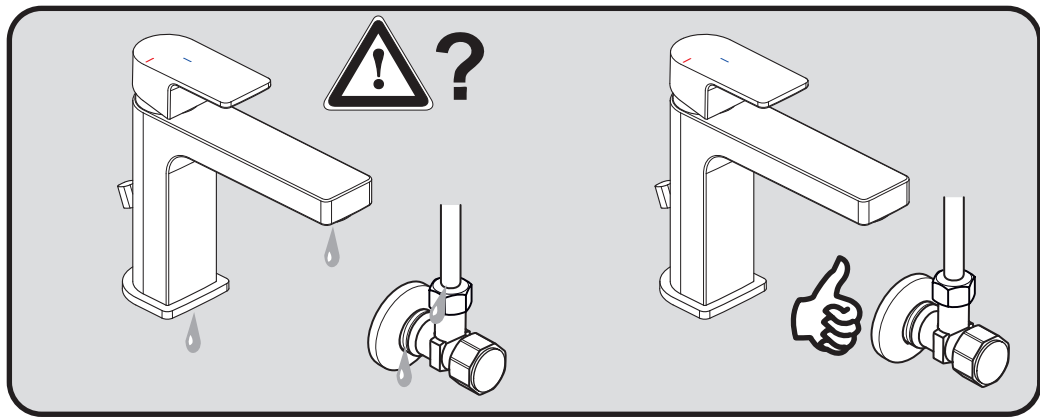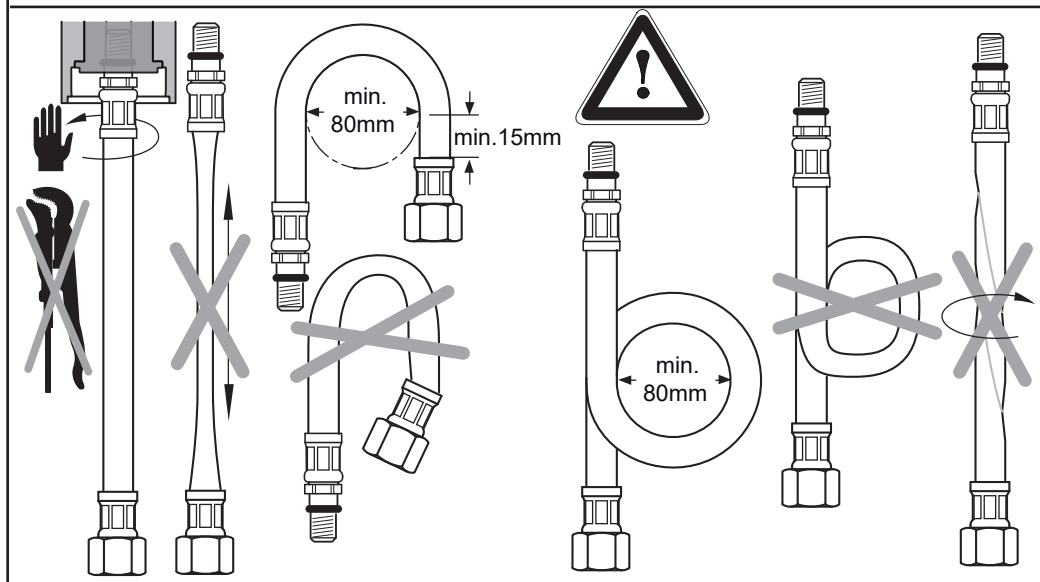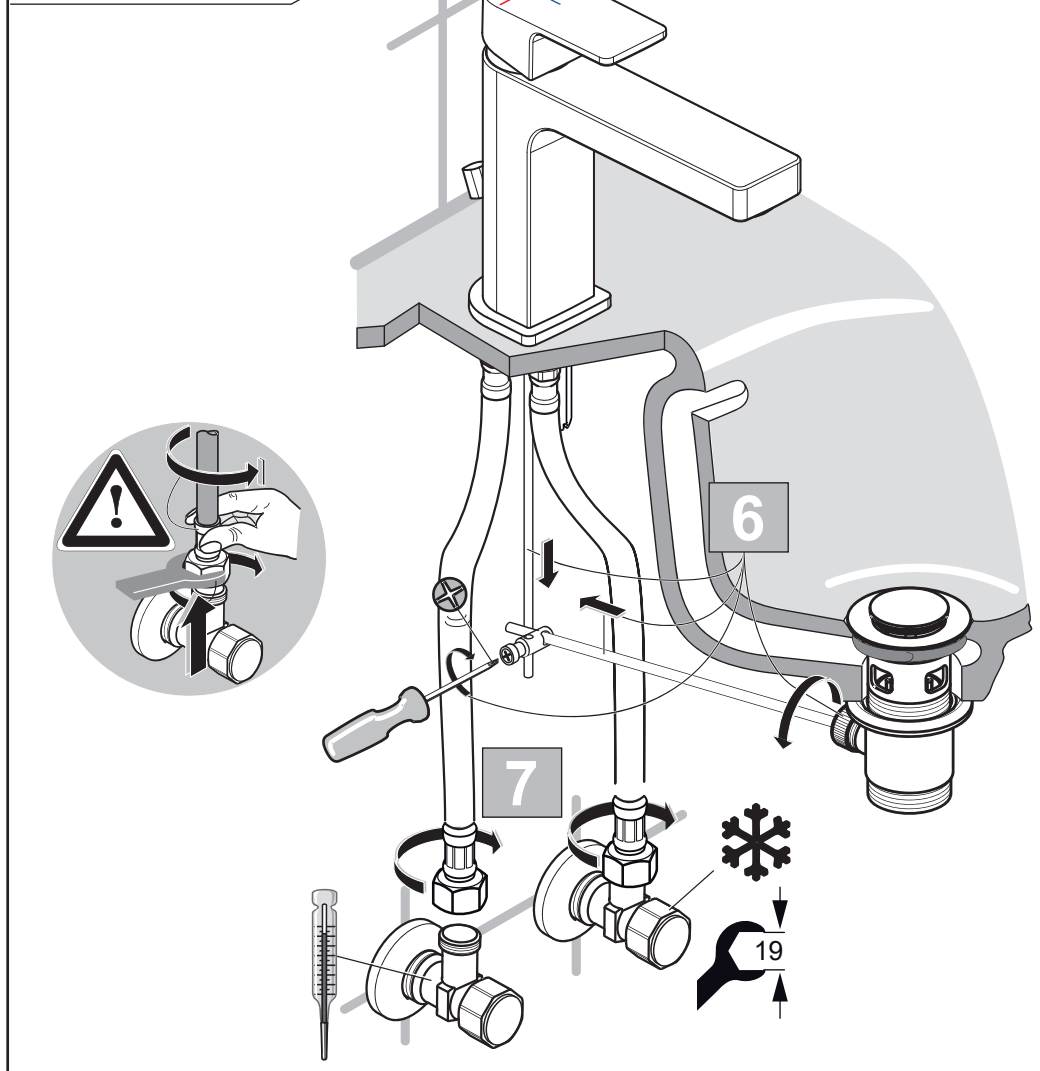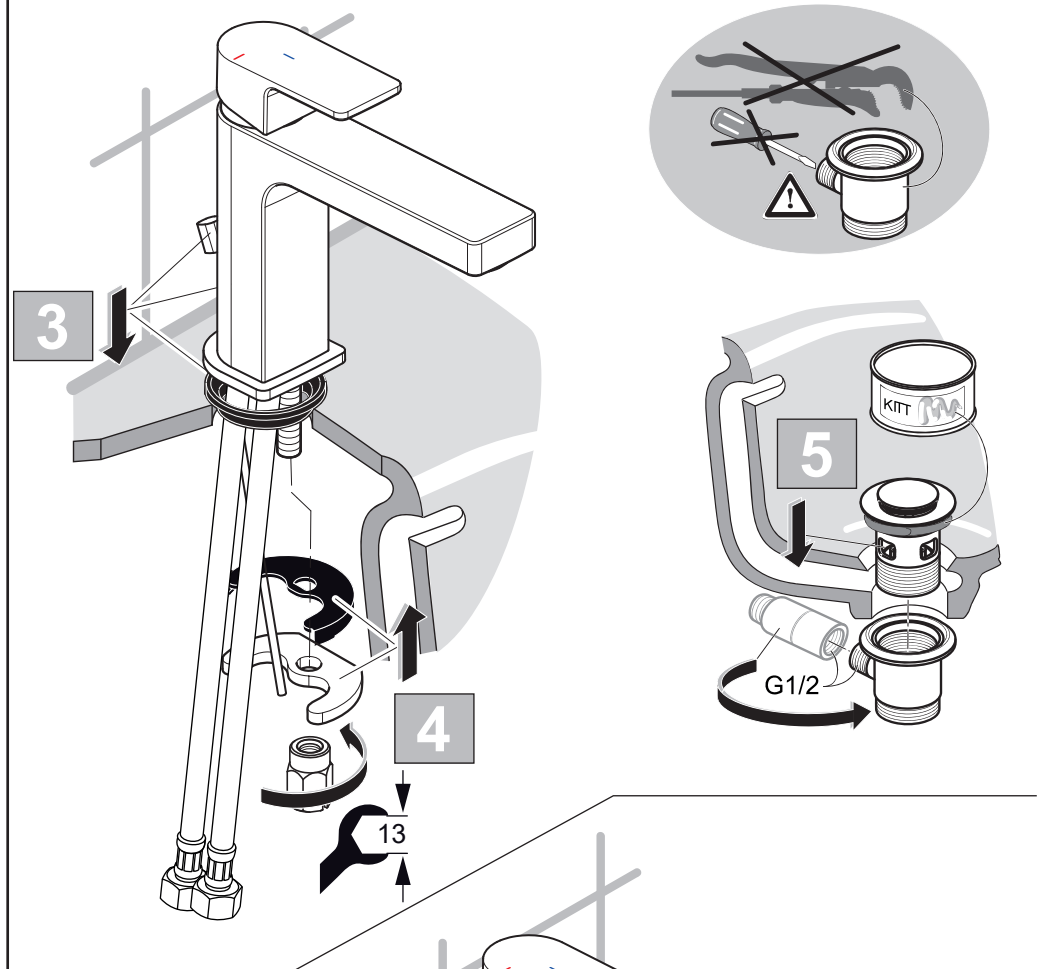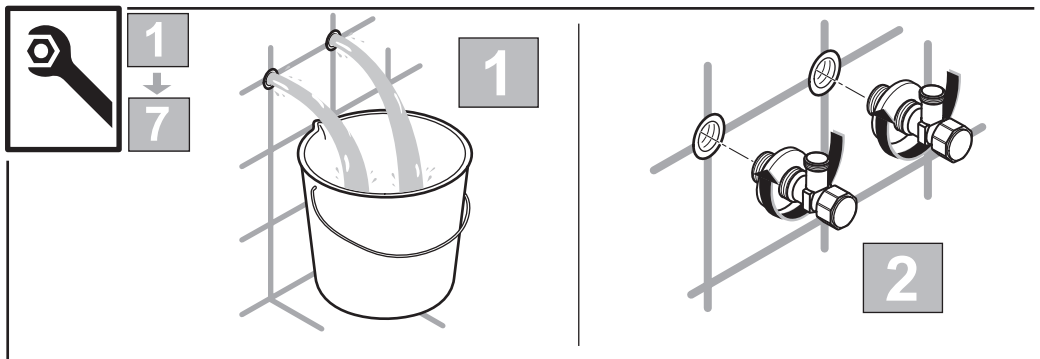

	P	bar				Q (3 bar)
	T	°C				I/min 5